MRXBOX95LH-RFI

Remote Fail Indicator
Installation and Maintenance

nuaire

CE

The EMC Directive
2014/30/EU
The Low Voltage Directive
2014/35/EU
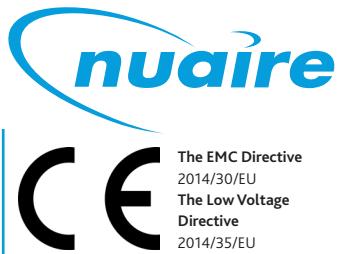
1.0 Wiring

The diagram below illustrates the wiring details for the MRXBOX95LH-RFI when used with the MRXBOX95-LH1, LH2 and WH1 units, allowing for remote status indication. The RFI is connected to the fan unit via low voltage wiring.

Figure 1.
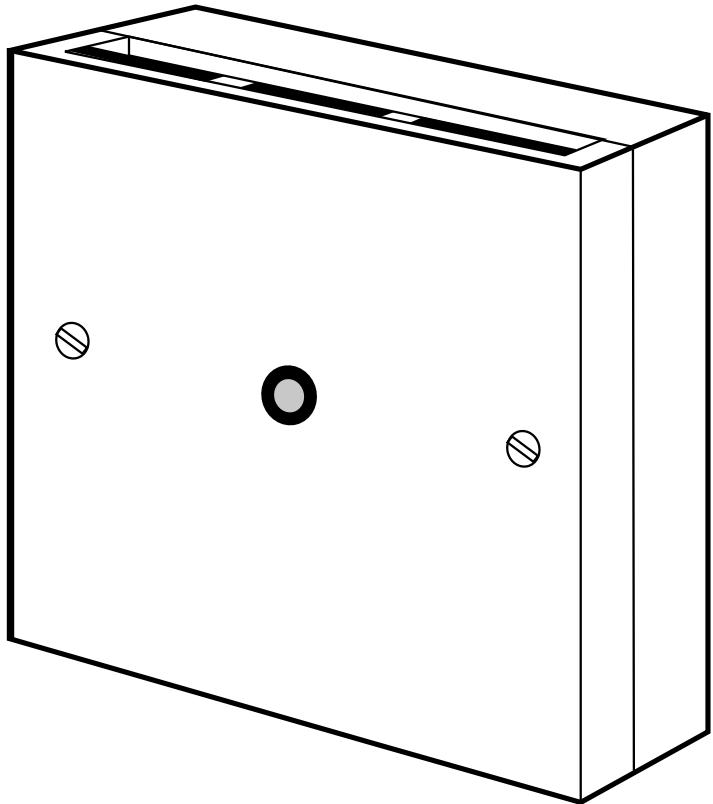
Figure 2. Fan Terminal Block

TEMP

FAIL

3

2

Connection to Remote Fail Indicator